 


Specification


Item	Model	E560C/E561C	E560C-W32/E561C-W32	E560C-W64/E561C-W64
Screen		5.6" color TFT		
Power supply		AC100-240 ~50Hz/60Hz 15W or DC13.5V/1.5A		
Connection		In series		
Talk		With handset (E560 Series)		Hands-free (E561 Series)
Power consumption		13.5V, 500mA (Max)	13.5V, 500mA (Max)	13.5V, 500mA (Max)
Optional ring tone		12 chord ring		
Connection wire length and wire requirement		30m	50m	100m
		RVV4*0.3	RVV4*0.5	RVV4*0.75
Operation temperature		-10°C to +55°C		
Optional sub unit		KW-111		
Optional outdoor unit		All of our 4-wires outdoor camera		

KENWEI

5. 6"COLOR TFT VIDEO DOOR PHONE INDOOR MONITOR

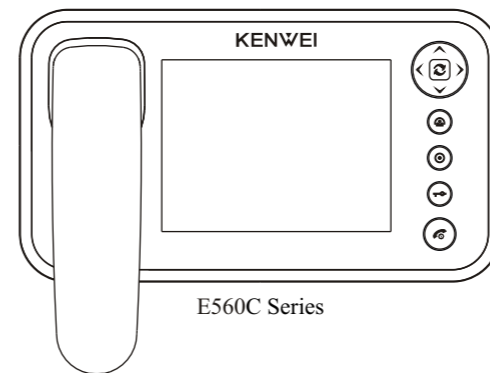

E560C Series

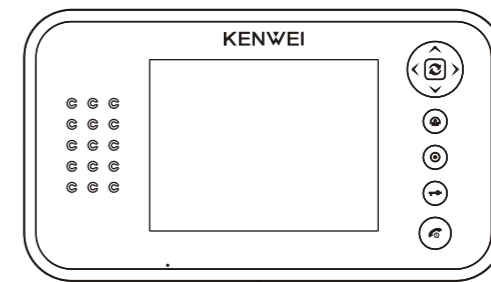

E561C Series

- E560C
- E560C-W32
- E560C-W64
- E561C
- E561C-W32
- E561C-W64

Content

Products Introduction	3
Feature and parts	4
Operation	5
B&W image memory introduction	8
B&W image memory operation	8
OSD menu operation	9
Troubles shooting guide	11
Specification	12

Products Introduction

Thank you for purchasing our product of building intercom system series. Please read the instructions carefully and follow the directions before installing the products. Any problem regarding to the product, please inquire your supplier.

General features:

- Monitor and remote unlock
- Kinds of chord ring and dingdong sound (optional) with clear tone
- Color, brightness and contrast, etc. adjustable
- No bother (mute) function
- Support B&W image memory
- 0-100 degree talk volume control (E561C Series)



CAUTION: To avoid the risk of electric shock, please don't remove cover or back. Please ask professional person if maintenance needed.





Remind users that important operation and maintenance guide are included in the attached user's manual.

Remark



* **KENWEI** reserves the right to change or modify design, features and functions and specifications without any prior notice for the improvement and promotion of products' quality. Please refer to the real products.

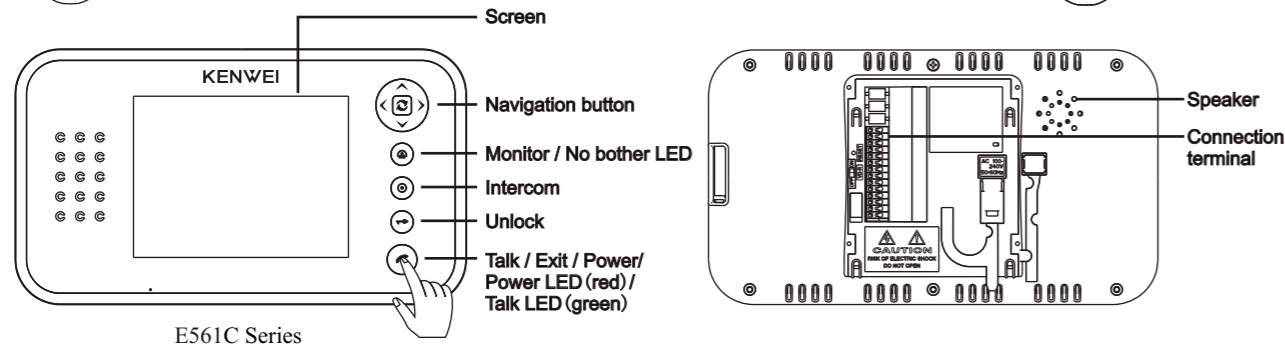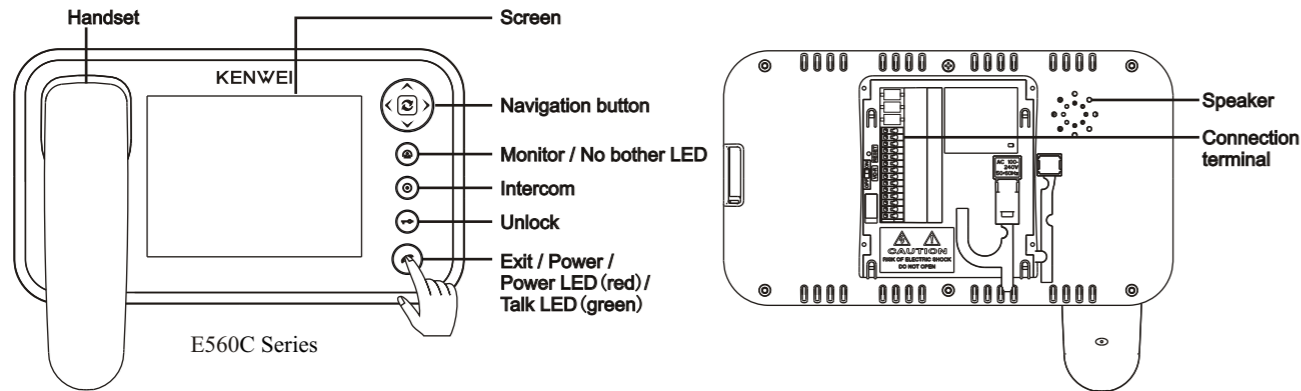
Features and parts



Operation

1. On / Off:

- After get through the power, the unit will enter into standby mode automatically, and power LED light (red). Under OFF mode, press “” (pic.1) you will hear “DI”, the unit enter into standby mode, and power LED light.
- Under standby mode, press and hold “” (pic.1) till power LED turns off, the unit enter into OFF mode.

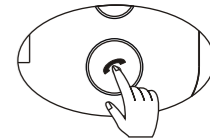

pic.1

2. Call remind:

a. Door 1 calls in:

When Door 1 calls in, the monitor will automatically display its image, you will see CH1 on the screen. At the meanwhile, talk / power LED will flash by turns and sound ring. No ring tone when the unit is under no bother mode.



b. Door 2 calls in:

When Door 2 calls in, the monitor will automatically display its image, you will see CH2 on the screen. At the meanwhile, talk / power LED will flash by turns and sound ring. No ring tone when the unit is under no bother mode.


c. Intercom:

When monitor A calls monitor B, both of monitors will sound “DU LONG DONG”.

3. Monitor / Exit:

- Under standby mode, press “” (pic.2) to monitor Door 1, and the screen will display CH1. Monitor time will last 90s then the system will automatically exit monitor mode and back to standby.
- Under monitor mode, press “” (pic.2) monitor Door 2, and the screen will display CH2. Monitor time will last 90s then the system will automatically exit monitor mode and back to standby.

Remark: Under monitor mode, you can only monitor without voice, and cannot open the door.

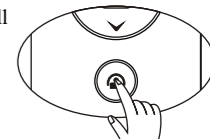

pic.2

4. Talk / Stop:

a. Call and talk:

When outdoor calls in, the monitor will sound ring, pick up the handset to talk. (E560C Series)

Operation

When outdoor calls in, the monitor will sound ring, press “☎” (pic.1) to talk with outdoor. (E561C Series)

b.Monitor and talk:

Under monitor mode, pick up the handset to talk with outdoor. (E560C Series)

Under monitor mode, press “☎” (pic.1) to talk with outdoor. (E561C Series)

c.Stop:

Under talk mode, hang up the handset and back to standby mode. Or just wait 90s, the system will automatically back to standby mode. (E560C Series)

Under talk mode, press “☎” (pic.1) to exit talking. Or just wait 90s, the system will automatically back to standby mode (E561C Series)

5.Open:

Under talk mode, press “↔” (pic.3) to open the door.

6.Music select:

Under standby mode, press “<” or “>” (pic.4), the unit will sound the current ring tone. each time press “<” or “>” (pic.4), you will hear different ring tone. Choose the one you like, then press “☎” (pic.1) or wait 30s, the system will reserve the current ring tone.

Door 2's ring tone is the one next to Door 1.

Remark: After power off, the ring is default to “DING DONG”.

Intercom's ring tone is “DU LONG DONG”, and cannot change.


7.Ring volume adjust:

Under music select mode, press “^” (pic.5) to adjust the ring volume.


8.No bother setup / exit:

a.under standby mode, press and hold “🔊” (pic.2), no bother LED light, and the unit sound “DI”. Now it is under no bother mode.


Under standby & no bother mode, press and hold “🔊” (pic.2), till no bother LED turns off, and the unit sound “DI DI”. Now it has exited no bother mode.

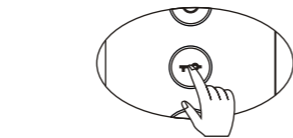


pic.3

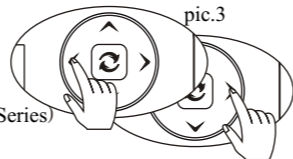


pic.4

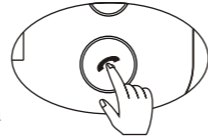

pic.1

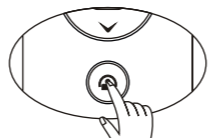

pic.2

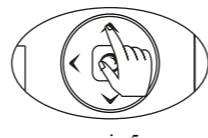

pic.5

9.Away setup (pass this item if the unit is without memory)

a.Under standby mode, press “v” (pic.6), the away LED light, means the unit is under away management mode.

b.Under standby mode, press “v” (pic.6), the away LED turns off, means the unit is exit away management mode.

10.Navigation mode choose:

Each time when you press navigation button under monitor or talk mode, it is default to OSD menu. Now you can press “↻” (pic.7) to choose OSD menu or image memory.

11.Intercom:

a.Main unit calls sub unit KW-111

When the sub unit is under standby mode, pick up the main unit's handset, press and hold “📞” (pic.8) to call sub unit. Now you will hear “DU LONG DONG” at intervals, pick up the sub unit's handset to start talking. (E560C Series)

When the sub unit is under standby mode, press and hold “📞” to call sub unit. Now you will hear “DU LONG DONG” at intervals, pick up the sub unit's handset to start talking. (E561C Series)


b.Sub unit KW-111 calls main unit

When the main unit is under standby mode, pick up the sub unit's handset, press and hold “📞” (pic.8) to call main unit. Now you will hear “DU LONG DONG” at intervals, it is ready to talk.


12.Calling transfer (suitable for connection sub unit KW-111)

When the unit (suppose is main unit) is talking with outdoor unit, press “📞” (pic.8), both main / sub unit and outdoor unit will sound “DU LONG DONG” at intervals. Pick up the sub unit's handset, then it can talk with outdoor unit.


Operation

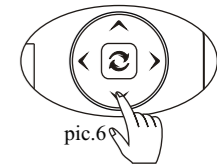

pic.6

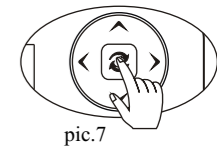

pic.7

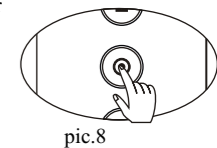

pic.8

Operation

B&W image memory introduction

The unit with B&W image memory has the following function:

1.Record:

The users can record the picture with time, max. to 64pcs.

2.Review:

The users can review the recorded picture under monitor or talk mode.

3.Auto-off:

During reviewing, if you don't press any button related to image memory function, the memory would be automatically off after 10s.

4.Time display and edit:

During image memory operation, the screen will show the time. You can edit the time and date.

No time display under normal monitor mode.


5.Away management:

When the unit is under away mode, the system will automatically record the picture of each calling.

B&W image memory operation


a. When the unit is under away mode, the system will automatically enter into monitor mode if somebody calls in, and record the picture.

After the users come back, turn on image memory mode, and review the recorded picture by press “ > ” .

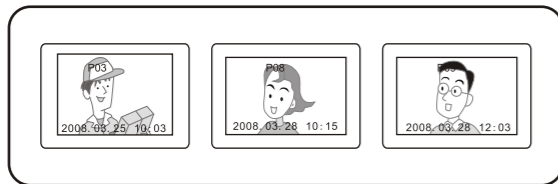

Operation

b. Under monitor & image memory mode, press “ < ” to record the picture with time, max. to 32 or 64pcs. Over that, the system will automatically cover the oldest one.

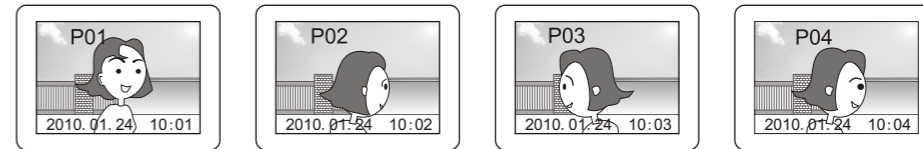


c. Under monitor and image memory mode, press “ ^ ” to choose the time or date you need change, then press “ > ” to edit time or date. After edit, press “ ^ ” to exit time edit mode.

Remark: When the power off, all of the recorded image will lost.


OSD menu operation



MenuA (E560C/E561C Series)

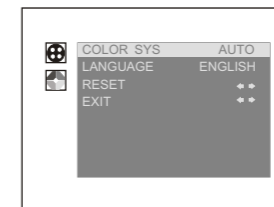

MenuB (E560C Series)

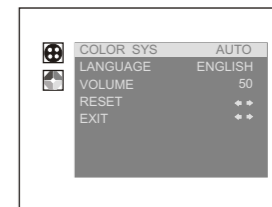

MenuB (E561C Series)

This menu could adjust brightness, contrast, language, etc.

Turn on the screen, press “ ⌂ ” to enter into OSD menu mode. Press “ v ” to open Menu A, press “ v ” to choose the item you need adjust, press “ < ” or “ > ” to adjust.

After choose EXIT item in Menu A, press “ v ” again to open Menu B.

1. Each time enter into monitor / talk mode, the navigation button is default to OSD menu mode. Press “ < ” and “ > ” to adjust talk volume. (Only suitable for E561C)

Operation

2. Image brightness, contrast and color adjust

Under OSD menu mode, press “ √ ” to open Menu A, press “ √ ” again to choose brightness, contrast, color item. Then press “ < ” or “ > ” to adjust.

3. Picture impact adjust

Under OSD menu mode, press “ √ ” to open Menu A, press “ √ ” again to choose impact item. Then press “ < ” or “ > ” to choose bright, soft, standard and manual.

4. Color system setup

Under OSD menu mode, press “ √ ” to open Menu B, then press “ √ ” again to choose color system item. Press “ < ” or “ > ” to choose AUTO, NTSC and PAL.

5. OSD menu language setup

Under OSD menu mode, press “ √ ” to open Menu B, then press “ √ ” to choose language item. Press “ < ” or “ > ” to choose the language you need.

6. Picture quality reset

Under OSD menu mode, press “ √ ” to open Menu B, then press “ √ ” to choose reset item. Press “ < ” or “ > ” to reset the picture quality to factory setting.

7. Exit OSD menu

Under OSD menu mode, press “ √ ” to open Menu B, then press “ √ ” to choose exit item. Press “ < ” or “ > ” to exit OSD menu.

Troubles shooting guide

Problem	Possible reason	Solution
Totally cannot work.	1. The unit haven't connected power. 2. The unit is under OFF mode. 3. The sub unit is short circuit.	1. Check if the power is ON. 2. Refer to OPERATION point “a. On”. 3. Check if the connection between main and sub unit's power line and ground line are short circuit.
Outdoor unit cannot call.	1. The connection between indoor and outdoor unit is cut. 2. The main unit is OFF.	1. Check the connection between indoor and outdoor unit. 2. Refer to OPERATION point “a. On”.
Indoor unit cannot monitor, and the unit sound “DI DI” to alarm.	The connection between indoor and outdoor unit is short circuit.	Check if the connection of indoor and outdoor unit's power line and ground line are short circuit.